




Northwoods-POCT Glucose Fingerstick Workflow


There is a specific workflow for the Northwoods locations when they are performing POC fingerstick glucose testing. The POC Glucometer devices are NOT interfaced so the results of the test will need to be manually entered into Epic by the nurse performing the test.


Try It Out


- 1. The correct order must first be placed: **POCT Glucose Fingerstick**, Lab order **PNW331161**. This order is found in PNW Order Sets and can be entered as a single order using the search box.
- 2. Select the correct order.
- 3. Click Accept.

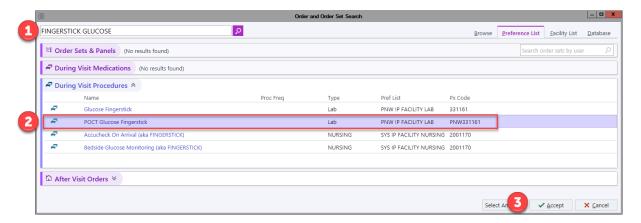

- 4. Enter the correct **Frequency**.
- 5. Click Accept.
- 6. **Sign** the order.
- 7. Complete the **Order Mode**.
- 8. Complete Ordering Provider.
- 9. Click Accept.

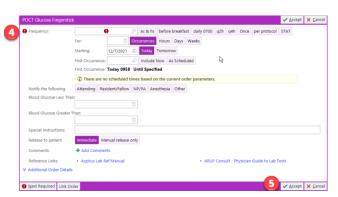

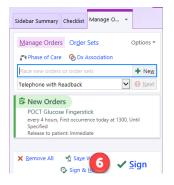


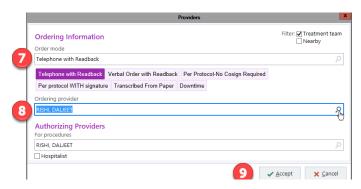







10. Acknowledge the order from your Overview Report.

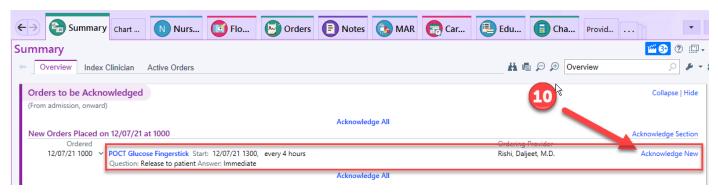

11. The POCT orders show in their own print group on your **Active Orders** report with a link to the **Enter/Edit Results** activity OR...

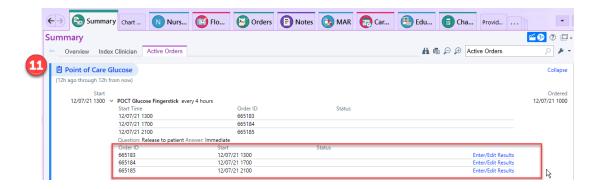


12. You can also see a task is automatically on the **Brain**. Hover over the **Task icon** and see a link to **Enter/Edit results**, click this link to enter the results of your fingerstick glucose. **NOTE**: Orders with an untimed frequency can't appear automatically on the Brain. You can manually enter a task or use the link from your Active Orders report.

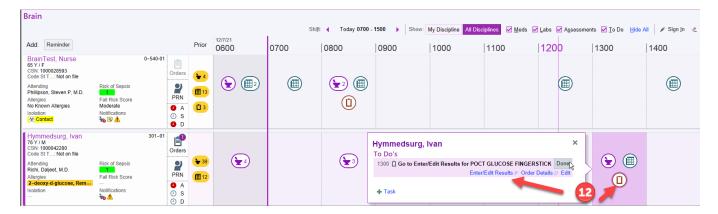





- 13. Once in the Enter/Edit activity, select a fingerstick glucose order.
- 14. Click Edit.
- 15. Fill in the Collection Date and Collection Time.
- 16. Enter the BGM result from your glucometer in the Value field.
- 17. Update the Status field to **Final**. (This is what will drop a charge)
- 18. Click Accept.

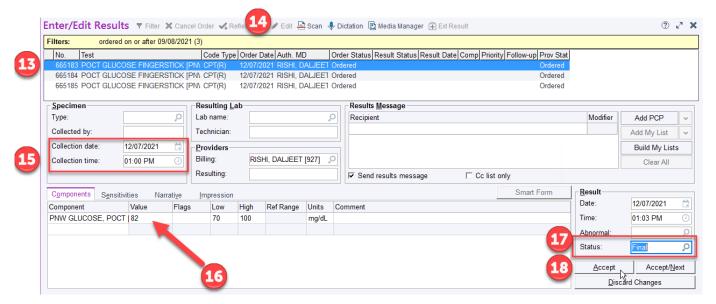

19. Clinicians will see the result in Chart Review under the Lab tab.

